

# Cricket Settings Guide

- Click Setup icon (top middle)
- Click Load Default / Yes

## -Change Record settings

- Click Record icon
- Change the following
  - Alarm/Motion Rate: 10 10 10 10
  - Working Hour Rate: 2 2 2 2
  - Non-working Hour Rate: 2 2 2 2

## -Change Motion settings

- Click Alarm icon (bottom left)
- Change the following
  - Motion Enable: O O O O
  - Buzzer X
- Click Alarm Input & Output
- Click Alarm-Out Setup
- Change Alarm Full Screen From O O O to \_ \_ \_
- Right click mouse twice
- Click Motion
  - For each camera, change the sensitivity to 85