



HD ANALOG Install Tips

**This camera's default Analog video output is set to: CVBS*

HD Analog Compatibility

While Analog (CVBS) and HD Analog (T_VI, C_VI, A_HD) share the same type of connectors, they're different signal types that are not compatible with each other.


Because there are signal tuning variations between each HD Analog DVR manufacturer— we can not guarantee that the HD Analog output from the camera will display correctly with off-brand equipment.

HD Analog Output Through the OSD Menu

Before changing the HD Analog output of the camera, check the compatibility of the DVR to ensure that it can accept the desired camera output. Selecting an incorrect HD Analog output from the camera can result in poor video quality or no video on the DVR.

To change the HD Analog Output: Enter the OSD Menu of the camera, then access the SYSTEM Menu. Select the desired HD Analog Output using left or right (**CVBS**, **A_HD**, **T_VI**, or **C_VI**).


Changing the HD Analog Output here also affects the analog test monitor outputs on the CE-REMOTE and the 2-pin test monitor connection located on the camera board.

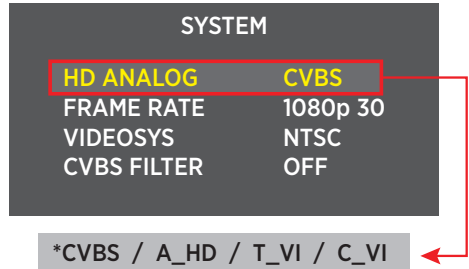

HD Analog Output Using the Joystick

Move and Hold the OSD Joystick in the desired direction (Up, Down, Left, Right) for 3 seconds to change the output signal type.

- Up: **A_HD**
- Down: **CVBS** (default)
- Left: **C_VI**
- Right: **T_VI**

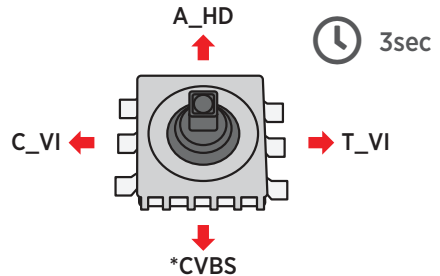

HD Analog Distance

HD Analog signals degrade with long runs of cable. The image can appear washed out and lacking color saturation (black & white).

If you need further help call Clinton Electronics Technical Support at 800-549-6393.

**Information in this document is subject to change without notice*

v.02.10.21