

TO ENABLE MOTION TRACKER & QUICK ZOOM:

- ① From the main menu select **SPECIAL**.

CLINTON EXHD 2.0	
0. ZOOMFOCUS	↕
1. EXPOSURE	↕
2. WHITE BAL	ATW
3. IMAGE ADJ	↕
4. BACKLIGHT	WDR
5. DAY&NIGHT	AUTO ↕
6. DNR	MIDDLE
7. SPECIAL	↕
8. SERIAL	↕
9. SYSTEM	↕
10. EXIT	SAVE


- ② Scroll down to select **MOTION**.

7. SPECIAL	
ROTATE	ROTATE180
D-ZOOM	1.0X
DIS	OFF
ACE	OFF
DEFOG	OFF
LENS SHADING	OFF
PRIVACY	OFF
MOTION	ON ↕
RETURN	↕

- ③ To enable colored boxes that track motion in the Detection Window, select **MOTION OSD** then set to **ON**. The thickness of the colored box can be increased or decreased by adjusting **MOTION BOX**.

MOTION	
DET WINDOW	↕
SENSITIVITY	5 []
ESTIMATE	OFF
QUICK ZOOM	OFF
MOTION BOX	5 []
MOTION OSD	ON
TEXT ALARM	OFF
SIGNAL OUT	ON
RETURN	↕

DET WINDOW (Frame ON)

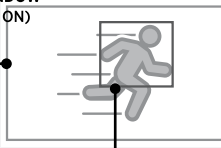


MOTION OSD: Moving objects in the DET Window are tracked with a colored box.

By default the DET Window is not shown, to enable this feature enter the DET Window menu and turn On **WINDOW FRAME**.

- ④ To digitally zoom-in on moving objects within the Detection Window, select **QUICK ZOOM** then adjust to **ON**.

MOTION	
DET WINDOW	↕
SENSITIVITY	5 []
ESTIMATE	OFF
QUICK ZOOM	ON ↕
MOTION BOX	5 []
MOTION OSD	ON
TEXT ALARM	OFF
SIGNAL OUT	ON
RETURN	↕

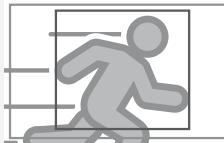

QUICK ZOOM: Zooms IN to moving object

! IMPORTANT

The same camera image shown on the PVM screen will be output to a connected DVR. Do not turn on Motion Tracker & Quick Zoom if you do not want the recorded video to have colored lines and zoom in/out.