


32" & 43" Connect PVM Basic Setup Guide

1. Remove Cover Plate and Install PVM

Remove the cover plate on the back-side of the PVM and set aside. Install the PVM to desired VESA mount following instructions supplied with VESA mount.

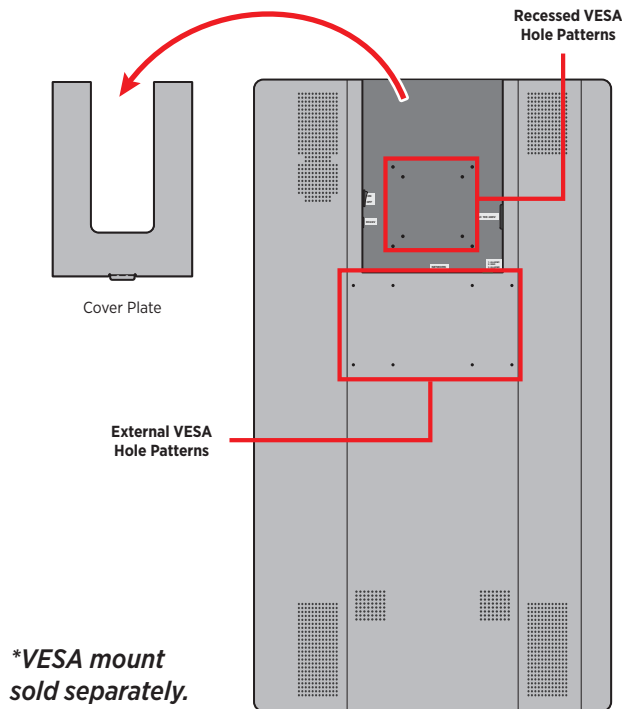

ATTENTION

Verify the Connect PVM is installed correctly. It should have a vertical orientation (portrait mode) with the camera located at the bottom of the device. If the device is installed horizontally both the camera feed on connected DVR/NVR and the digital signage content will not display correctly.




Portrait
(Vertical)
CORRECT



Landscape
(Horizontal)
WRONG

2. Connect Power

Connect either DC24V power to PVM (using the supplied 4-Pin DIN pigtail adapter cable) or AC110V (using the supplied power cord).

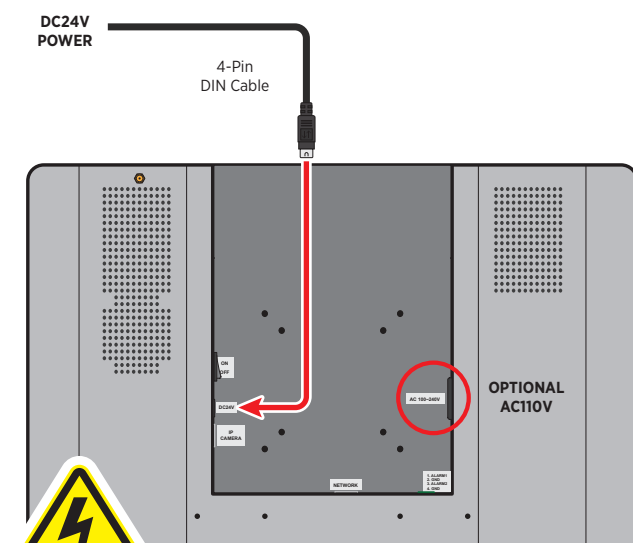


WARNING!

ONLY USE DC24V OR AC110V INPUT!

**DO NOT CONNECT DC24V & AC110V POWER SIMULTANEOUSLY.
CONNECTING BOTH WILL CAUSE DAMAGE TO THE DEVICE.**

3. Connect to Network

Connect an ethernet cable to the port marked 'NETWORK' if this PVM will use a "hard-wired" network connection. If this will PVM be connected using WiFi attach the included antenna.

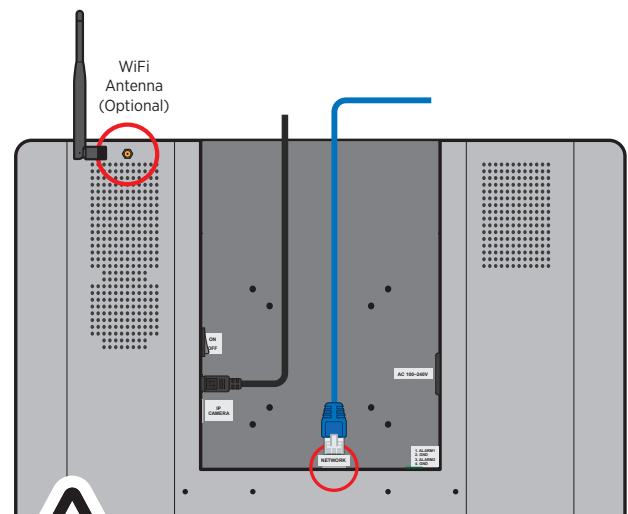

ATTENTION!


**A network connection is required for the PVM to receive media updates and complete the setup process.*

THIS IS NOT A POE DEVICE!

POWER MUST COME FROM DC24V OR AC110V SOURCE

4. Power 'ON' PVM and Begin On-Screen Setup


Set the power switch to the **ON** position. Wait for the boot-up to complete.

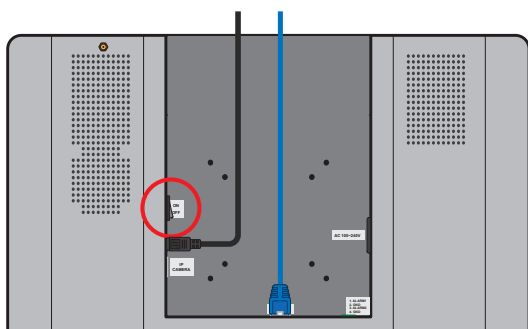

Start of Boot-up

.....

Boot-up Complete

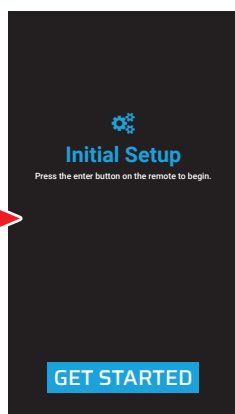


5. Connect to Internet

Follow the on-screen prompts using the included remote and connect to the desired network. After selecting a network (and entering a password if applicable), an Internet check test will be performed.

Remote is required for setup



Keep the remote in a safe place for later use

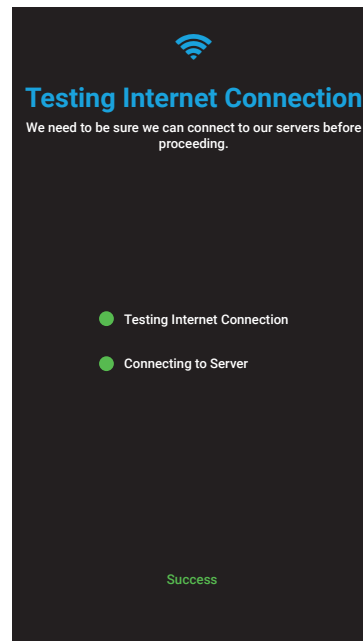

**If the device can not connect to the internet and/or the Clinton server— contact the company's IT admin.*

6. Scan QR Code and Complete Setup

Display the company-specific QR Code when prompted. Ensure the correct company code is being used, using the wrong company code will result in the PVM receiving incorrect updates.



**The QR Code is required to associate the PVM with a company so it can receive the correct content. If you do not have a QR Code, contact your supervisor or Clinton Connect account admin and to request a code. The QR Code can be found online at app.clintonconnect.com*

Optional Connections

If desired, connect **Alarm Input** connections using the included 4-Pin terminal block. The pins are ordered right-to-left.

The **IP Camera** uses its own network connection (*it can not be accessed using the network connection used in Step 4*). To view the IP camera on the network connect a separate ethernet connection to the port marked **IP Camera**.

